

Silent disco manual

How to set everything up in just a few minutes

📞 Need help? Call +31 85 004 13 00 or email info@silentdisco.nl. We are happy to help, also during your party.



▶ **Prefer watching? See our explainer video on YouTube**

What is in the box?

- Headphones, fully charged
- Transmitter(s), with power adapter (standard transmitter) or charged battery (portable transmitter)
- Connection cables
- An envelope with return label(s), cable ties and the return form

Ready in 4 steps

1 Switch on the transmitter

Standard transmitter: plug it into a power socket. Portable transmitter: switch it on, the battery is already full.

2 Connect your music

Connect your laptop, tablet or DJ set to the transmitter with the included cable. Portable transmitter: Bluetooth also works.

3 Switch on the headphones

Switch the headphones on with the button on the bottom and select the channel of your transmitter. The colour of the light shows which channel you are on.

4 Set the volume

Turn the volume of your music source up high, then adjust the volume with the dial on the headphones.


Test everything before the weekend, on a working day between 9:00 and 17:00. That way we can help you straight away if something is not working. At weekends we are harder to reach.

Tip: use a laptop or tablet rather than a phone. With a phone, the music stops when you get a call or walk too far from the transmitter. Using a phone anyway? Switch it to airplane mode.

The standard transmitter



Needs mains power, so place it near a power socket. We include two cables with every standard transmitter:

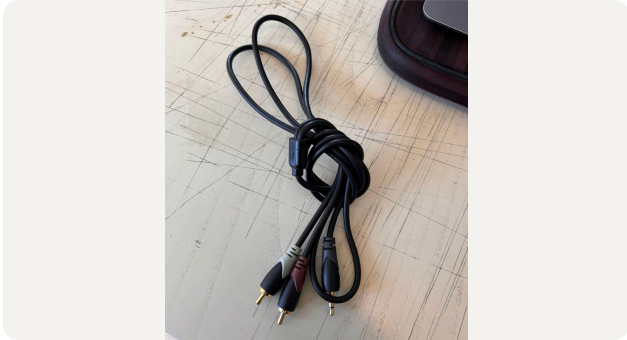

RCA/jack cable (2 to 1)

For a laptop or tablet (aux output). Want to connect a phone? You will need an adapter. We can include a USB-C or Lightning adapter for € 3.50 excl. VAT. Just ask when you book.



RCA/RCA cable (2 to 2)

Ideal for a DJ set or mixing console.

The portable transmitter



Runs on a battery, so no power socket needed. It arrives fully charged. You can connect music with a cable (aux) or via Bluetooth. For a DJ set, we always include an RCA/jack cable.

Pairing via Bluetooth

1. Press and hold the Bluetooth button.
2. At first the light flashes blue only: keep holding until it flashes **blue and red**.
3. Now select the transmitter in the Bluetooth settings of your phone or laptop.

Multiple transmitters (multiple music channels)

Set each transmitter to a **different channel**, otherwise they will interfere with each other. Each transmitter needs its own music source. Guests choose which channel to listen to on their headphones.

Connecting the wireless microphone

1. You have a mixing console (4), a transmitter (6) and the receiver unit (1) of the wireless microphone (2). Connect all three to a power socket.
2. Connect the transmitter (6) to **Main Out** on the mixing console (4) using the RCA/RCA cable (5).
3. Connect the receiver unit (1) to the mixing console (4) using the included XLR cable (3).
4. Switch on the microphone (2) with the button on the bottom, until the light turns green.
5. Switch on the headphones and select the same channel as the transmitter. In the photo, the transmitter is on channel 2 and the headphones light up red.



Numbered parts



Ready to use

Not working? Check this first

No sound

Is the volume on the headphones turned up? Are the headphones on the same channel as the transmitter? Is the volume of your laptop, phone or DJ set turned up high? Is the cable firmly plugged into the output of your music source?

Noise or crackling

Switch the transmitter and the headphones to another channel. Point the antenna upwards and place the transmitter in the open, not in a cupboard or bag.

Music drops out

Using a phone? Switch it to airplane mode or use a laptop. With Bluetooth: stay close to the portable transmitter.

Still stuck?

Just call us: +31 85 004 13 00. We will walk you through it. We are easiest to reach on working days between 9:00 and 17:00.

After your party: returning the equipment

1. Switch off all headphones.
2. Fold all headphones and put them back in the box, together with the transmitter(s), cables and adapters.
3. Fill in the return form and put it in the box.
4. Close the box with the included cable ties and attach the return label.
5. Drop the box off at a DPD Pickup point **before 12:00 noon on the next working day** (not a DPD locker, the box will not fit).



Happy with your silent disco?

Help us with a short review on Google, it only takes a minute. Scan the QR code or click here. ★★★★★

Enjoy your silent disco! 🎧